




Omega National
P R O D U C T S

KitchenMate™ Corner Pantry P0610MNL, P0615MNL

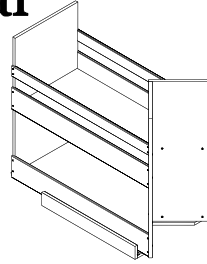

Installation Instructions

- Inspect unit - if damaged, contact Omega National Products immediately
- Installation should be completed by experienced cabinet installer
- Review instructions completely before beginning installation
- Cannot be installed in European style (frameless) cabinets

Step 1: Remove cabinet doors and hinges. Measure width of opening from corner base cabinet.
Minimum diagonal dimensions: at least 14 $\frac{1}{2}$ " for P0615MNL and at least 10 $\frac{1}{8}$ " for P0610MNL.

Step 2: Remove plywood Sled (bottom section of unit with slides attached) from Corner Pantry unit by disengaging latches on inside corner of bottom rails [see Figure 1]. Position Sled as shown in Figure 2 and temporarily fasten with one #8 X 1" screw. Remount Pantry to Sled and check for proper alignment. When alignment and proper position for closure – with doors installed - is confirmed, remove Pantry from Sled and fasten with three remaining #8 X 1 screws.

Step 3: Install door fronts to face of Pantry unit. Mounting may require inside corner edges of cabinet doors be modified or miter cut. (See Figure 3).

